

# Hello, the time is Now.

Polaroid Now  
Instant Camera  
Generation 2

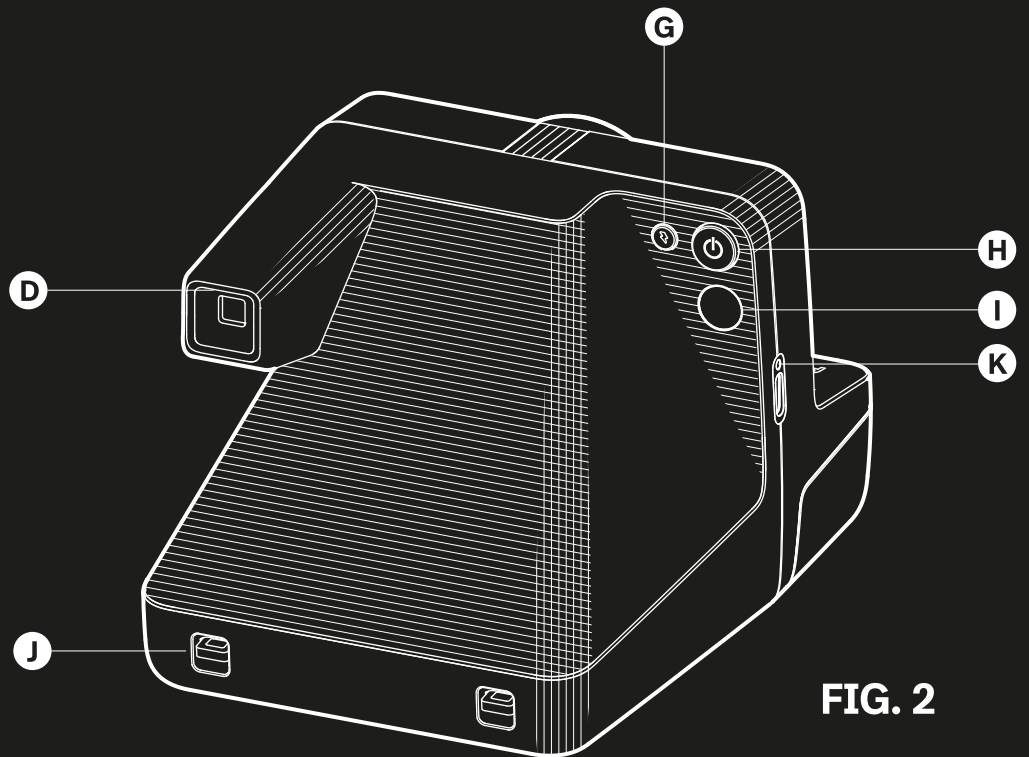


FIG. 2

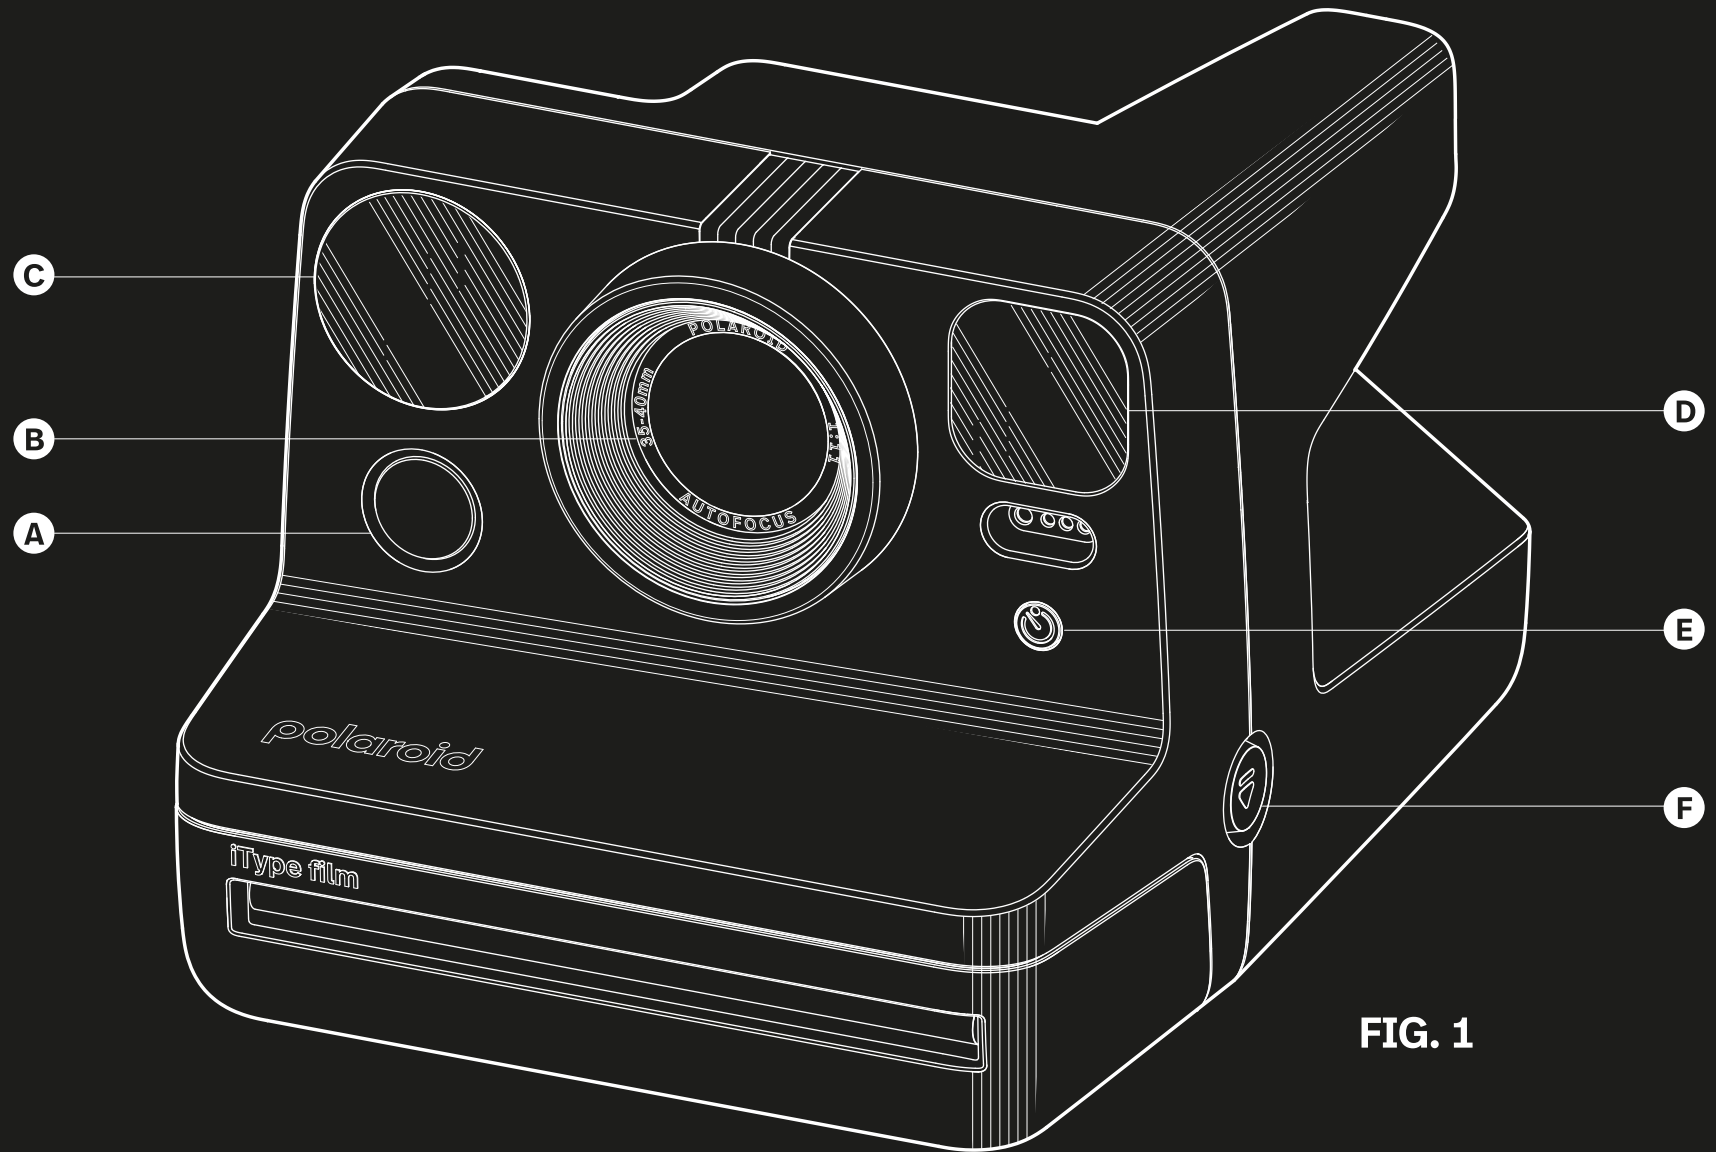


FIG. 1

- Ⓐ Shutter Button
- Ⓑ Lens
- Ⓒ Flash
- Ⓓ Viewfinder
- Ⓔ Self-timer & Double Exposure\*

- Ⓕ Film Door Button
- Ⓖ Flash ON|OFF Button\*
- Ⓗ ON|OFF Button
- Ⓘ Film Counter LED
- ⓵ Neck Strap Loop

- Ⓚ USB Charging Port & Battery Level Indicator:
- Battery full
- Battery half full
- Battery low

# Quick Start Guide

This camera works with

I-TYPE FILM

600 FILM



Read this Quick Guide online  
[www.polaroid.com/now-manual](http://www.polaroid.com/now-manual)


Have a problem or question? Contact our Customer Support Team

USA/Canada  
[usa@polaroid.com](mailto:usa@polaroid.com)  
+1-212-219-3254


EU/Rest of World  
[service@polaroid.com](mailto:service@polaroid.com)  
00800 5770 1500 or  
[visit polaroid.com/help](http://visit.polaroid.com/help)

Made in China for, and distributed by, Polaroid International B.V., 1013 AP, Amsterdam, The Netherlands. POLAROID, the Color Spectrum, and the Classic Border Logo are protected trademarks of Polaroid. ©2023 Polaroid. All rights reserved.


- 1 Turn on the Polaroid Now camera by pressing ON|OFF button.

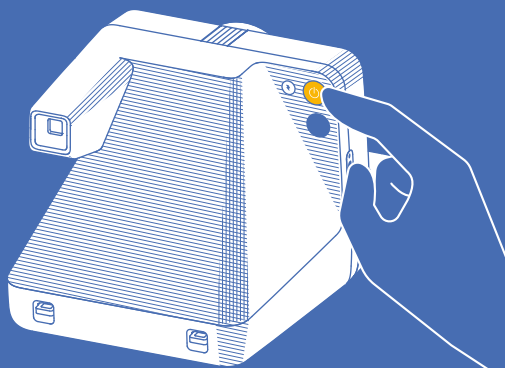


- 2 Open the film door.

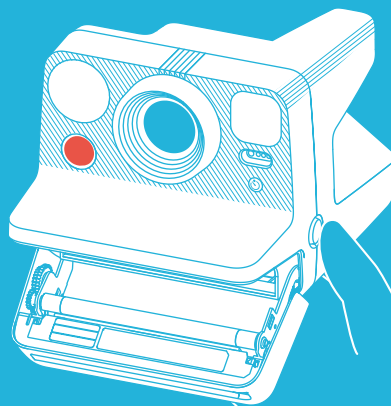


- 3 Insert the film pack darkside up and with the tab facing toward you.

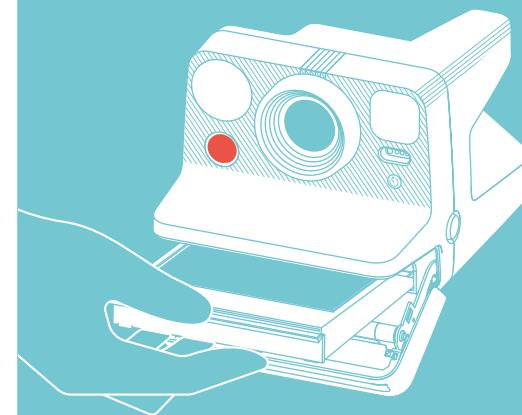


- 4 Close the film door. The darkslide covered by the film shield will eject.

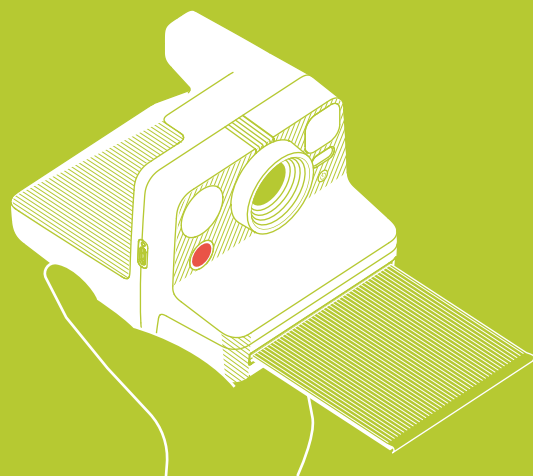


- 5 Remove the darkslide and allow the film shield to roll back in.

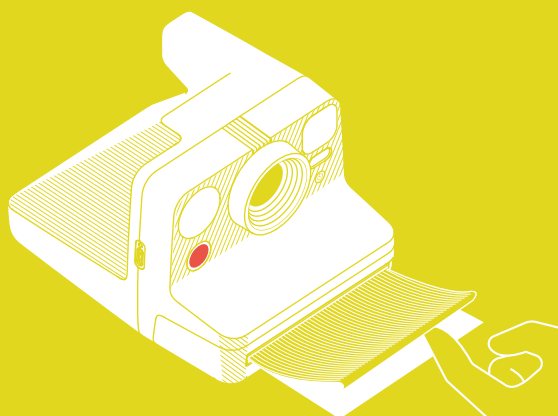


- 6 Aim at your subject and press the shutter button. The flash will trigger automatically.

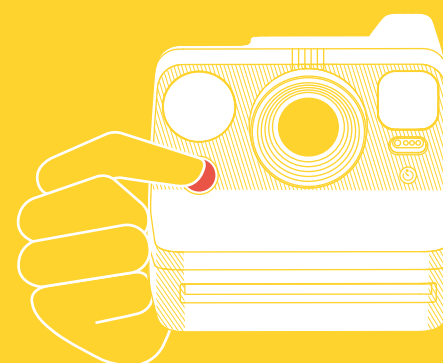

- 7 To shoot without flash, press the flash button before each shot.

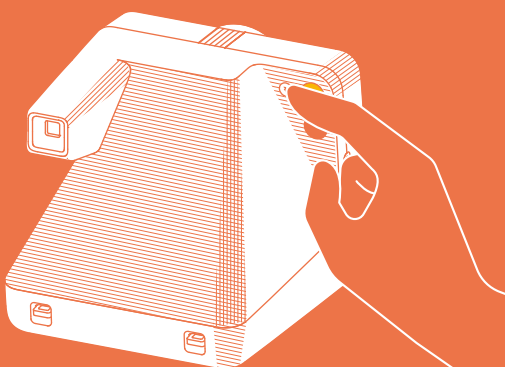

- 8 The photo covered by the film shield will eject.

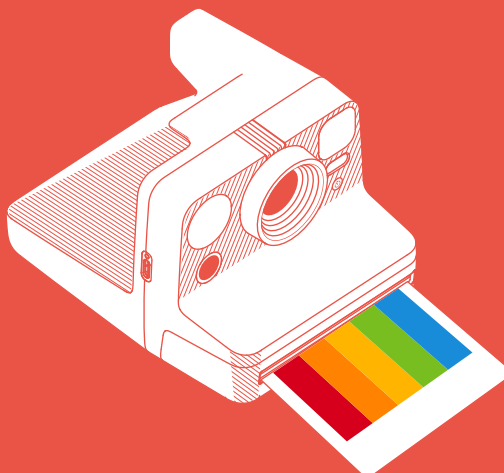

- 9 Don't shake the photo! Place it in a dark place or face down on a flat surface.

