

 **Polaroid**



Barbie™



**How does the
Barbie Polaroid
camera work?**



Check it Out !



Table of Contents

Barbie[™]



**How to Load
Film / Page 1**



**How to Take a
Photo / Page 3**




**How to Take Great
Photos / Page 6**



**How to Take Care of Your
Barbie Instant Camera /
Page 9**

The Polaroid Barbie Instant Camera

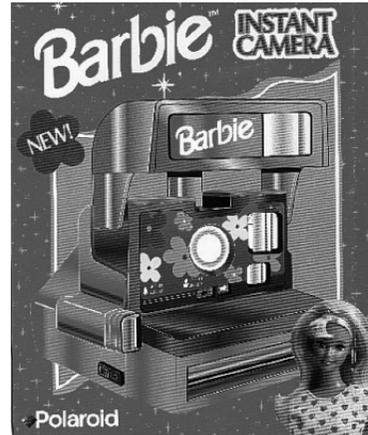


Barbie Instant Camera Barbie Stickers



Take great photos with your Barbie Instant Camera. See your photos develop right before your eyes. Just load the film, point and shoot. It's that easy!

Also, check out the Barbie stickers included with your camera! Stick them on your Barbie Instant Camera or on your photos.

 What Film Can I Use




Your Polaroid Barbie Instant Camera works with these films:

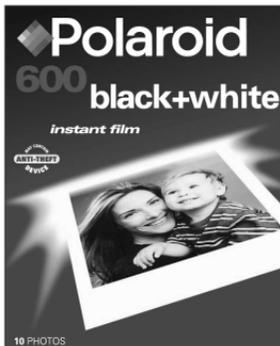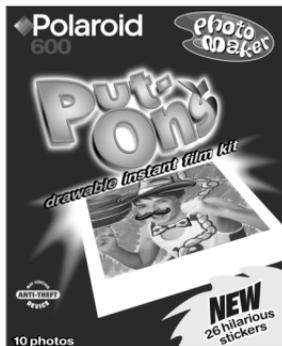


How To Load Film




- 1 Pull up the flash unit and snap it into place.

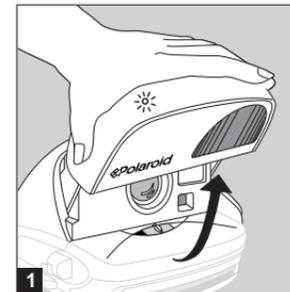


- 2 Open the film door by pushing the blue film door button.

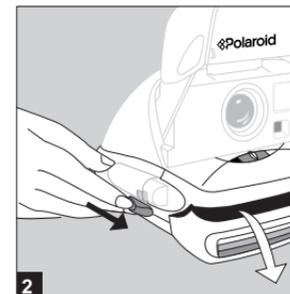


- 3 Insert the film pack into the camera just like in the picture. Be sure to hold the film pack only by the edges. Push the film pack all the way in until you hear a “clicking” noise.

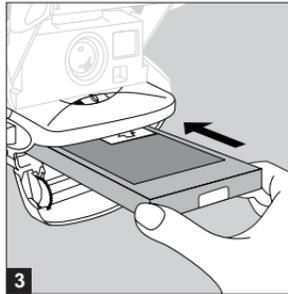

- 4 Close the film door shut. The camera will eject the cardboard film cover. Throw this piece away.

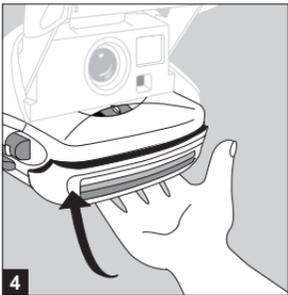


- 5 The picture counter is a little window on the back of the camera. The number inside the window tells you how many photos are left in your film pack. Each new film pack contains 10 photos.

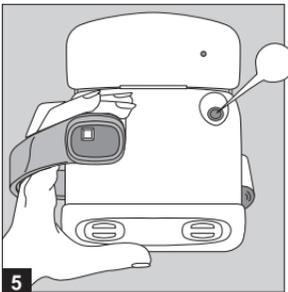


How to Take a Photo




On the front of your Barbie Instant Camera there is a button that slides to the left and right. This button controls which lens the camera will use when you take a photo.

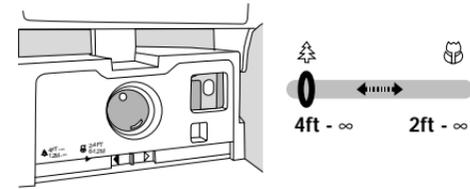


- 1 If you want to take a photo of a subject that is 4 feet or more away from you, push the button to the left.

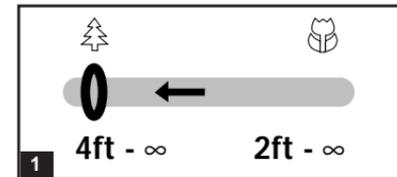


- 2 If you want to take a close-up photo of a subject that is 2 to 4 feet away from you, slide the button to the right.

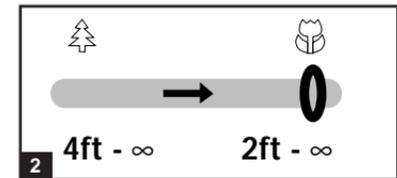


- 3 Look through the viewfinder to make sure your subject is in the right position to take a photo.

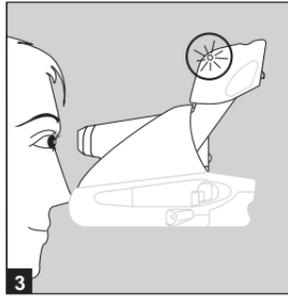


- 4 When you are ready to take a photo, press the green shutter button.

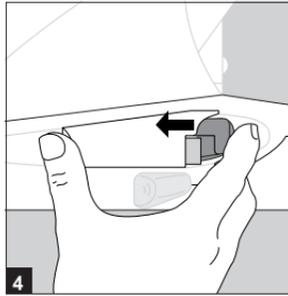

- 5 The photo automatically comes out of the camera. Don't shake your developing photo or put it in direct sunlight.

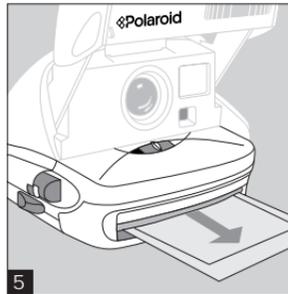


- 6 When you are done using your Barbie Instant camera, be sure to snap the flash unit closed. This helps save the camera's battery power.

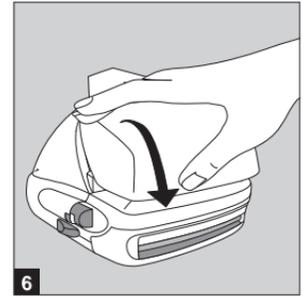

How to Take Great Photos




To take a photo of a subject that is shiny or metallic, or to take a photo through a window, you need to do something special so that your photo turns out right.

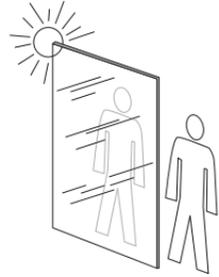

- 1 Right next to the green shutter button that you use to take a photo is a small pink button. Pressing this button lets you take a photo without the flash.

So, whenever you take a photo of something very bright or metallic, or take a photo through a window, press this pink button.

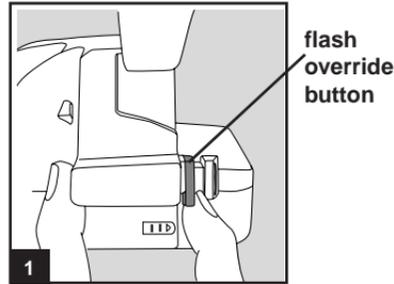

Sometimes, when you take a photo it can turn out looking too dark or too light. This is because there was either too much or too little light in the scene when you photographed it.




Too Light



Too Dark


You can fix this by using the lighten/darken control on your camera.

On the front of your camera there is a blue button that slides back and forth. When the blue button is pushed to the left it darkens a photo. When the blue button is pushed to the right it lightens a photo.

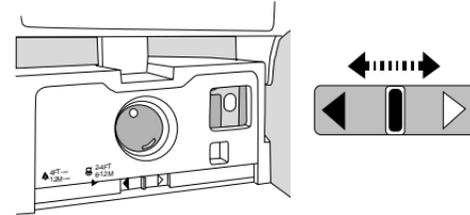

- 2 To lighten a photo that is too dark, slide the blue button all the way to the right.


Be sure to slide the blue button back to the center before you take another photo.

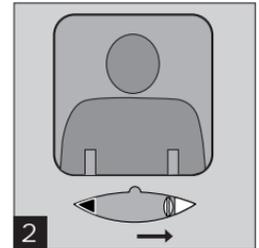

- 3** To darken a photo that is too light, slide the blue button all the way to the left.

Be sure to slide the blue button back to the center before you take another photo.

And always be sure to keep the sun behind you or at your side when you take a photo.

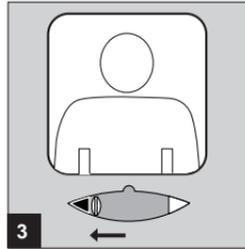


Taking Care of Your Barbie Instant Camera



It's easy to take good care of your Barbie Instant Camera. Follow these simple steps below, and your Barbie Instant Camera will always be ready to give you great photos.

Make sure you never touch the camera's lens. Fingerprints left on the lens will make your photos look bad.

If the lens gets dirty, gently wipe it with a soft tissue cloth. Remember to be very gentle with the camera lens.

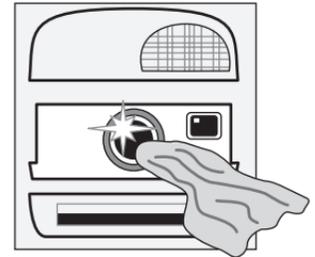



Look at the photo to the right. How does this happen?

Spots can show up on photos if the developer rollers inside the film door of your camera get dirty.

To fix this problem, open the film door of your camera. Inside the film door are the developer rollers.

To clean the rollers, take a lint-free cloth and sprinkle some water droplets on it. Gently rub the developer rollers with the cloth until they are clean.

If there is film in your camera, clean the rollers in a place with very dim light.

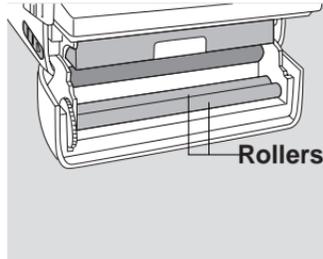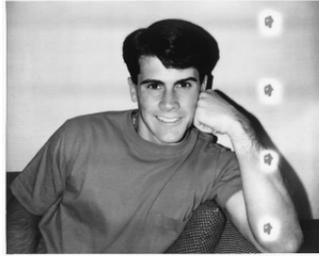

Got Questions about Your Barbie Instant Camera Kit



Give us a call!
Polaroid Corporation
Toll Free 1-800-432-5355



or logon to our site!

www.polaroid.com

One Year Limited Warranty

Polaroid will, at our option, repair or replace any camera found defective in manufacture within the warranty period. The warranty period is determined by the date of camera purchase. Keep the receipt as proof of purchase. Otherwise, the warranty period is determined by the date of manufacture. **This warranty does not apply to damage caused by accident, misuse or tampering, and excludes all consequential damages except in jurisdictions not allowing such exclusions or limitations.**

Caution

This camera is battery operated. To avoid electrical shock, do not expose or immerse in water or other fluids, disassemble, or operate if dropped or damaged. Supervise children when camera is operated by them or used in their presence. Contact a Polaroid Service Center for repair information.

“Polaroid,” “AlterImage,” “Wild Sides” and “Put Ons” are trademarks of Polaroid Corporation, Cambridge, MA, U.S.A. Printed in the U.S.A. PU20021M 7/98.